



# Pivotal Echo 5G<sup>™</sup> Installation Manual

Version 1.0



# **Table of Contents**

Safety and Regulatory Information4
FCC Signal Booster User Information4
FCC Part 15 Information for User4
FCC Radiation Exposure Statement4
Intellectual Property5
Disclaimer of Warranties; Exclusion of Liability5
Contact Information5
Overview of Echo 5G6
Installation & Setup7
System Components
General Configuration
Choosing a Location for your Echo 5G
Finding the Best Window for Reception
Pre-Installation Cleaning
Installing Outdoor (ODU) and Indoor (IDU, alignment cling) Components
Installing the ODU on the outside of your window10
Installing the IDU on the Inside of your Window11
Connecting to Echo 5G13
Add the Echo 5G as a Recognized Device via Laptop13
Establish Network Connection to the Echo 5G via Laptop
Add the Echo 5G as a Recognized Device via Smartphone17
Echo 5G Web Interface19
Connecting to Echo via Web Browser19
Echo 5G Settings (Details)20
Setting Azimuth or Elevation Manually20
Appendix A – 28 GHz Echo Technical Specifications22



Appendix B – 39 GHz Echo Technical Specifications	.23
Appendix C – Troubleshooting & Support	.24
Indicator Lights Overview	24
What the IDU Indicator Light Displays Mean	24
What the ODU Indicator Light Means	25
FAQ / Troubleshooting	25
Getting Technical Assistance	26
Appendix D – Warranty Information	.28
Standard Limited Warranty	28
User License Agreement for Software	29
Appendix E – Glossary	.32
Appendix F – Removal Instructions	.34



# **Safety and Regulatory Information**

This manual should be read and used as a guideline for properly installing and operating the Pivotal Echo 5G device. This manual may be changed for system improvement, standardization, and other technical reasons without prior notice. Updated manuals are available at: <a href="https://pivotalcommware.com/Echo5GUserManual.pdf">https://pivotalcommware.com/Echo5GUserManual.pdf</a>.

For questions on the manual or their content, contact <a href="mailto:support@pivotalcommware.com">support@pivotalcommware.com</a>.

## FCC Signal Booster User Information

WARNING. This is not a CONSUMER device. This device may not be sold at retail. You MUST have an FCC LICENSE or express consent of an FCC Licensee (or express consent of your service provider) to operate this device. Antennas must be installed at least 20 cm (8 inches) from any person. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

## FCC Part 15 Information for User

Outdoor Unit (ODU) – FCC ID: 2AUVU-OES3.

• This device contains FCC IDs: 2AUVU-UBR410M and 264-WL18SBMOD

Indoor Unit (IDU) - FCC ID: 2AUVU-IES3

Pursuant to part §15.21 of CFR Title 47, you are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

<u>Note</u>: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

## **FCC Radiation Exposure Statement**

To ensure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been evaluated to comply with the FCC's exposure criteria. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The installation of the Echo unit should allow at least **20 centimeters** between the device and persons to be in compliance with FCC RF exposure guidelines.

Use only Pivotal Commware approved power supplies and accessories that are specifically designed for your Echo device.



# **Intellectual Property**

All Intellectual Property, as defined below, owned by or which is otherwise the property of Pivotal Commware, Inc. ("Pivotal") or its respective suppliers relating to the Pivotal device, i.e., Pivotal Echo 5G, including but not limited to, accessories, parts, or software relating thereto (the "Echo 5G"), is proprietary to Pivotal and protected under federal laws, state laws, and international treaty provisions. "Intellectual Property" means any Pivotal (or where applicable, Pivotal's supplier's) intellectual property including, but not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with Pivotal and its suppliers.

# **Disclaimer of Warranties; Exclusion** of Liability

This document provides an introduction to features, functions, setup, and operation of Pivotal Commware's Echo 5G. For more information, refer to the <u>Warranty Information</u>.

# **Contact Information**

Headquarters: 10801 120th Ave NE #200 Kirkland, WA 98033 USA www.pivotalcommware.com

Do you have questions about your Echo 5G device? For 24-hour information and assistance, please contact Verizon's Automated Response System at: www.verizonwireless.com/support/



# **Overview of Echo 5G**

The Echo 5G is a self-installable, on-the-window, precision beamforming repeater designed to counteract mmWave penetration, reflection, and structural shadowing losses so it can gently flood an interior with native mmWave signal. Essentially, the Echo 5G acts as a portal between indoor and outdoor worlds.

For fixed wireless access (FWA) providers serving homes and enterprises, the Echo 5G facilitates Gigabit speeds and introduces a superior broadband choice and experience to cable and DSL end users. For 5G-connected devices, the Echo 5G enables outdoor-to-indoor signal transitions so users can ubiquitously enjoy the immersive 5G experiences that only mmWave capacity can deliver.

The Echo 5G product line accomplishes this using Pivotal's patented Holographic Beam Forming<sup>®</sup> (HBF) technology whose cost, size, weight, and power consumption (C-SWaP) profile is significantly lower than phased array beamformers; specifically, an order of magnitude less cost, less than half the weight, and less than one-third the power consumption.

With HBF, Echo 5G overcomes a major obstacle to cost-effectively delivering 5G broadband access to homes and businesses with mmWave-in-building penetration.



Figure 1: Millimeter wave signals bounce off windows



Figure 2: The Echo 5G boosts the signals through the glass



# **Installation & Setup**

The Echo 5G is designed to be easily installed. The following material provides guidance to perform a typical installation. Subsequent sections offer additional assistance if needed.

# System Components

5	<ul> <li>Echo 5G ODU (1)</li> <li>Outdoor unit (ODU) with HBF antenna and RF front-end functions:</li> <li>Conveys wireless data between user devices and nearby base station</li> </ul>
rails	<b>Rail-mounting tool (1)</b> For mounting the rails that hold the ODU – comes with pre-attached mounting rails and adhesive. 'This Side Up' text and arrow sticker indicate proper orientation.
FRONT BACK spacer ring	Wireless Power IDU (1) Indoor Unit (IDU): transmits power through the glass to ODU equipment
83	<b>Power Adapter (1)</b> Provides power from wall outlet to IDU
	Alignment cling (1) Mounts on indoor glass side of Echo 5G, helps with positioning IDU
	<b>Extra Rails (2)</b> To replace rails pre-attached to rail-mounting tool, if necessary





## **General Configuration**

Here's an example of the Echo 5G system configuration along with a diagram of the components that are installed on your window.



Figure 3: Window-mounted system: Echo Outdoor Unit (ODU) attaches to outside of window and smaller Indoor Unit (IDU) attaches to inside.





*Note*: The rail-mounting tool is only for installing the rails. It is not part of the final installation.

## Choosing a Location for your Echo 5G

The window you choose for your Echo 5G must:

- Receive quality 5G reception
- Be large enough to mount the rails at least **5** inches from any window edge or the ground (which positions the ODU so the window edges do not interfere with signal)
- Have an outlet within 10 feet of the mounting location indoors for plugging in the IDU

### Finding the Best Window for Reception

Identify the window with the best 5G reception by turning off your phone's wi-fi, downloading the SpeedTest App from your phone's App store, opening the app, and selecting '**Go**.'



## **Pre-Installation Cleaning**

Clean the **inside and outside** of the window glass according to the instructions on the back of the packet of wipes included with your Echo 5G.

- [1] Wipe glass vertically and then horizontally to ensure complete coverage. Be sure pad is wetting the glass surface.
- [2] While glass surface is still wet, wipe dry with a clean dry cloth or paper towel.



[3] Apply the item(s) to be bonded within thirty minutes.

# Installing Outdoor (ODU) and Indoor (IDU, alignment cling) Components

Make sure you have carefully <u>selected a good window</u> and performed the <u>required glass cleaning</u> before installing your Echo 5G.

**IMPORTANT:** Ensure the rails and window stay dry throughout the mounting process.

### Installing the ODU on the outside of your window

[1] Remove the strips to expose the adhesive on the rails that are pre-attached to the rail mounting tool.



- [2] Make sure the rail-mounting tool is aligned per the '**This Side Up**' text at the top of the tool with the arrow in the upper-right facing up, that the rails are level, and that you are mounting the rails at least 5 inches from any window edge. Press the mounting tool so that the rails adhere to the outside of your window.
- [3] Run your thumbs up and down the rails, pressing hard for 30 seconds.





[4] Pop the mounting tool off the rails by holding the rails and using the tabs on the side of the tool. Let the adhesive cure for one hour before sliding the ODU onto the rails.





Wait 60 minutes

[5] Slide the ODU onto the rails.



[6] Use the included Allen wrench to tighten the set screws on the ODU so the unit is secured to the rails.



## Installing the IDU on the Inside of your Window

[7] Remove the alignment cling from its backing and attach it to the indoor side of the glass, lining up the cling inside with the ODU mounted on the outside.



- [8] Remove the backing from the adhesive on the ring pre-attached to the IDU. Line the IDU up in the corresponding viewport in the cling.
- [9] Press the IDU firmly to the window and hold for 30 seconds.





<u>Note</u>: the adhesive ring adheres to the spacer ring and IDU with Velcro so you can remove the IDU and adjust as necessary once the adhesive-backed Velcro is secured to the window as outlined above.



Disassembled IDU (velcro, one side), spacer ring (Velcro, both sides), and Velcro-towindow adhesive



Assembled IDU, spacer ring, and Velcro-to-window adhesive

[10] Once the IDU has been applied to the window, insert the power adapter and plug the IDU in to a standard 110V outlet. The IDU lights will blink before going solid. If the green IDU light continues blinking for more than 30 seconds, remove the spacer ring and re-attach the IDU.





# **Connecting to Echo 5G**

You will activate the Echo 5G using the Echo 5G Manager web interface. In order to do this, you must first establish a wireless Bluetooth connection to the Echo device from your <u>laptop</u> or <u>smartphone</u>.

Your laptop/smartphone and the Echo will communicate via Bluetooth. (Specifically, they communicate via IP over a Bluetooth connection). Once connected, you will need to keep your laptop or smartphone within <u>10 feet</u> of the Echo unit until you are finished with activation.

# Add the Echo 5G as a Recognized Device via Laptop

- [1] Power on the Echo 5G so the laptop can discover it as a nearby Bluetooth device.
- [2] On your laptop toolbar, right-click the Bluetooth icon:





[3] In the pop-up list, select Add a Bluetooth Device.



[4] A Settings screen will appear with a list of options (left side). Select **Bluetooth & other devices** if it doesn't show by default, then select **Add Bluetooth or other device**.

Settings	
வ் Home	Bluetooth & other devices
Find a setting	+ Add Bluetooth or other device
Devices	
	Bluetooth
Bluetooth & other devices	On On
日 Printers & scanners	Now discoverable as "NA00420L"
() Mouse	Mouse, keyboard, & pen
Touchpad	Logitech® Unifying Receiver
Typing	Show notifications to connect using Swift Pair
cØ Pen & Windows Ink	When selected, you can connect to supported Bluetooth devices quickly when they're close by and in pairing mode.
P AutoPlay	
🖞 USB	Download over metered connections
	To help prevent extra charges, keep this off so device software (drivers, info, and apps) for new devices won't download while you're on metered Internet connections.

[5] Select **Bluetooth** as the intended device type.





[6] Select the Echo from the displayed list of nearby Bluetooth devices. It will show as 'echo.'

Settings	Add a device	×
命 Home	BI Add a device	
Find a setting	Make sure your device is turned on and discoverable. Select a device below to connect.	_
Devices	لتے LE-Bose QuietComfort Blu	^
Bluetooth & other devices		
品 Printers & scanners	Nov	1
() Mouse	Mc	
🗔 Touchpad	E-Bose_A	
Typing	ر الج echo	
d Pen & Windows Ink		
(စု) AutoPlay	Au	
D USB	⊊	_
	Cancel	

[7] This adds your Echo unit to the list of devices available for interaction with the laptop. You will see a confirmation message when the Echo and your laptop are finished pairing.





[8] Then select Done.

# Establish Network Connection to the Echo 5G via Laptop



[1] Right click the Bluetooth icon in your laptop toolbar.



[3] The system displays the *Devices and Printers* panel. Select your Echo device. Then, from the **Connect using**▼ button, select Access point.



[4] Confirm that the **Connect** button is now replaced with a **Disconnect from device network** button. This is evidence that the Echo device is currently connected.

🞕 Devices and Pri	inters			_		×
$\leftarrow \  \   \rightarrow \  \   \land \  \   \land$	< « Devices and	d Pri 🕨 Bluetooth Personal Area Net	work Devices	~ Ū	Search De	٩
Add a device	Add a printer	Disconnect from device network	Remove device		•	?
✓ Devices (1) −		Disconnect				
echo						
ec	<b>cho</b> Model: Blu Category: Ne	ietooth Peripheral Device twork infrastructure device				

[5] You will now be able to ativate the Echo 5G device from this laptop using the Echo 5G Manager web interface.

## Add the Echo 5G as a Recognized Device via Smartphone

[1] Turn on your phone's Bluetooth if it is not already on.





## [2] You may also need to turn on Bluetooth tethering in your phone's Bluetooth settings.

	*)	Internet access Turn on Bluetooth tethe the paired device to acc internet from this phon	ering on cess the e.	$\bigcirc$			
[3]	Select the	Echo 5G from you	r list of ava	ailable Bluet	ooth d	evices and wait for it	to connect.
	Bluetooth	0			Blue	tooth	
	Make sure the to is in pairing to other device Paired devices	e device you want to connect I mode. Your phone is visible es as SAMSUNG-SM-G892A.			Make to is in to oth Paired	sure the device you want to connec n pairing mode. Your phone is visibl er devices as SAMSUNG-SM-6892A I devices	t
	Available device	2_4158			**	echo Connected	
	<b>米</b> 》 echo					REAC_4158	
	C LE-BO	ose QC35 II			Availa	ble devices	
		lue 2				LE-Bose QC35 II	
	Stop	Done				Scan Done	



# Echo 5G Web Interface

The Echo 5G Web Interface is the same whether it is on a Smartphone browser or laptop browser.

### **Connecting to Echo via Web Browser**

- [1] Navigate to web address **10.0.0.1** on your phone's web browser. If this page does not load, you may first need to clear your browser cache.
- [2] Enter the **last six digits of your Echo 5G's serial number** as your password. The serial number can be found on the bottom of the ODU, the back of the IDU, or on the packaging box.



Serial number shown on bottom of ODU



- [4] After submitting your password, the Echo setup will begin. Select **Go** for the Echo to scan and align with the strongest 5G beam source. Once scanning is complete, you will see the *Setup Complete* screen and can reset and rescan or view the details of the scan.
- [5] Should you wish to change your settings at any future time, simply go through this process again. The setup will skip the second and third screens in the image above and take you right to



the *Setup Complete* page (as the Echo retains the details of your previous scan). You should select **Reset** for the device to re-scan and re-align.

## Echo 5G Settings (Details)

[6] If you select Details, you can view the Azimuth (Az) and Elevation (El) along with other details of the Echo 5G's alignment in either dB or raw format. You can also manually set the Azimuth and Elevation if your connection is weak using the heatmap below the details to identify strong signal sources (which will appear in orange, yellow, or red).

Setup Complete	Setup Complete
Azimuth: -26 Elevation: 30	Azimuth: -18 Elevation: 5
Uplink	Uplink
VPOL UL dB: 17.0 HPOL UL dB: 17.0	VPOL UL 1: 235 HPOL UL 1: 241
	VPOL UL 2: 0 HPOL UL 2: 0
	VPOL UL 4: 174 HPOL UL 4: 171
Downlink	Downlink
VPOL DL dB: 17.0 HPOL DL dB: 17.0	VPOL DL 1: 255 HPOL DL 1: 217
	VPOL DL 2: 0 HPOL DL 2: 0
Switch to Paw	VPOL DL 4: 200 HPOL DL 4: 209
Switch to Raw	Switch to dB
Cubmit	
Sublint	Submit
Save and Exit	Save and Exit
DL VPOL: -15.2 dBm	DL VPOL: -15.2 dBm
DL HPOL: -15.1 dBm	DL HPOL: -15.1 dBm
UL VPOL: -21.8 dBm	UL VPOL: -21.8 dBm
OL HPOL: -19.0 dBm	UL HPOL: -19.0 dBm
Heat Map	Heat Map
Min: -10 Max: 0	Min: -10 Max: 0

## **Setting Azimuth or Elevation Manually**

The Manual Setup tab provides access to beam-pointing (Az, El) control in degrees.



Azimuth can be adjusted in 2-degree increments and decrements, and Elevation in 5-degree increments. The inputs are bounded from -35 degrees to +35 degrees in Elevation and -76 degrees to +76 degrees in Azimuth. You can begin with an initial setting of 0 for both Az and El.



Figure 4: "Top-down view" of azimuth settings range "Side view" of elevation settings range



Figure 5: "Top-down view" of azimuth settings range "Side view" of elevation settings range



# **Appendix A – 28 GHz Echo Technical Specifications**

Pivotal Echo 5G	Specifications
Frequency of operation	27.5 to 28.35 GHz
HBF az scan envelope	+/-76°
HBF el scan envelope	+/-35°
HBF antenna gain (donor side)	16 dB
HPBW towards gNB - azimuth	5°
HPBW towards gNB - elevation	20°
HBF scan loss	6 dB at 76°
Static antenna (service side)	6 dB
HPBW towards CPE/UE - azimuth	100°
HPBW towards CPE/UE - elevation	100°
Gain tunable range - DL	15 dB
Gain tunable range - UL	15 dB
Max electronic gain - DL	55 dB
Max electronic gain - UL	55 dB
Max EIRP - DL	29.5 dBm
Max EIRP - UL	29.5 dBm
Min noise figure - DL	5 dB
Min noise figure - UL	5 dB
In-band ripple (per 100 MHz channel)	2 dB
Operating Temperature	-30 to 45° C
Maximum Donor Range (to gNB)	3,000 ft
Maximum Indoor Range (to CPE/UE)	30 ft
Dimensions	7" x 7" x 1.5" for RF ODU, and 3.7" circle, 1.1" depth for IDU
Weight RF ODU	2.4 lbs.
Weight IDU	0.4 lbs.
IP Rating	IP54 for ODU; IP32 for IDU
Support Glass Type	Standard: single and double pane
Mounting	Adhesive, VHB
Max. Power Consumption	36 Watts (from outlet)
Power Method	AC adapter for IDU and wireless power magnetically induced for ODU
Configuration Management Interface	Bluetooth <sup>®</sup> and LTE CAT M1
Activation	Automated scan with setup via web-interface
Certifications	FCC, UL



# **Appendix B – 39 GHz Echo Technical Specifications**

Pivotal Echo 5G	Specifications
Frequency of operation	37.6 to 40 GHz
HBF az scan envelope	+/-76°
HBF el scan envelope	+/-35°
HBF antenna gain (donor side)	16 dB
HPBW towards gNB - azimuth	5°
HPBW towards gNB - elevation	20°
HBF scan loss	6 dB at 76°
Static antenna (service side)	6 dB
HPBW towards CPE/UE - azimuth	120°
HPBW towards CPE/UE - elevation	120°
Gain tunable range - DL	15 dB
Gain tunable range - UL	15 dB
Max electronic gain - DL	55 dB
Max electronic gain - UL	55 dB
Max EIRP - DL	30 dBm
Max EIRP - UL	30 dBm
Min noise figure - DL	5 dB
Min noise figure - UL	5 dB
In-band ripple (per 100 MHz channel)	2 dB
Operating Temperature	-30 to 45° C
Maximum Donor Range (to gNB)	Up to 3,000 ft
Maximum Indoor Range (to CPE/UE)	100+ ft
Dimensions	7" x 7" x 1.5" for RF ODU, and 3.7" circle, 1.1" depth for IDU
Weight RF ODU	2.4 lbs.
Weight IDU	0.4 lbs.
IP Rating	IP54 for ODU; IP32 for IDU
Support Glass Type	Low-E and Standard
Mounting	Adhesive, VHB
Max. Power Consumption	30 Watts (from outlet)
Power Method	AC adapter for IDU and wireless power magnetically induced for ODU
Configuration Management Interface	Bluetooth <sup>®</sup> and LTE CAT M1
Activation	Automated scan with setup via web-interface
Certifications	FCC, UL



# Appendix C – Troubleshooting & Support

# **Indicator Lights Overview**



# What the IDU Indicator Light Displays Mean

- U Solid blue light indicator
  - » DC power to the IDU



- Green light indicator
  - Blinking green: probing for an ODU
  - » Solid green: IDU is powering the ODU
  - If the length of the blinking green LED is longer than 30 secs, the spacer needs to be removed or IDU needs repositioning



## What the ODU Indicator Light Means



# FAQ / Troubleshooting

### What do I do if I have trouble accessing 10.0.0.1?

You may need to clear your browser cache, set your phone to airplane mode, or both.

### What does it mean when the IDU's green light continues to blink?

The IDU is not connecting to the ODU. Make sure the alignment cling and IDU are properly aligned with the ODU. If the window glass is double-paned, pull the IDU and spacer ring off the Velcro adhered to the window, remove the spacer ring, and reattach the IDU directly to the Velcro on the window.

### What does it mean when the ODU LED blinks red?

It means the ODU is searching for a signal. Once the ODU finds and assesses the signal it will turn a solid color to indicate the quality of traffic passing through the Echo.

### Does a solid red LED on the ODU mean it is not receiving 5G?

A solid red light means there is no traffic running though the Echo. This could be due to a bad signal OR it could be because there are no user devices pulling traffic through the Echo.

You can try using one of your connected devices to see if the LED changes to yellow or green or redo the activation This behavior will be refined to provide more intuitive guidance in a subsequent software update.

### What if the ODU light is red and it is because the signal is weak?

Adjust <u>Azimuth (Az) and Elevation (El) settings</u> for better alignment with the gNB or find a better location for the ODU.

### What if the Echo 5G is not transmitting?

Power the Echo 5G off, then power it back on.

### What do I do if the Echo 5G loses connectivity during activation?

Your Bluetooth connection may have dropped if your laptop or smartphone was moved too far away from the Echo 5G during activation. Try getting closer to the Echo 5G with the device you are using for activation via Bluetooth. You may need to re-do the network connection portion of the <u>Laptop-to-Echo</u> connection process.

### What do I do if the Echo 5G signal strength diminishes over time?

There may be a gradually increasing obstruction of the signal path to the gNB, such as leaves growing on trees that were not there during the initial Echo 5G setup. Re-do the <u>Connecting to Echo</u> <u>via Web Browser</u> steps of the Echo 5G Activation.

### What if the Echo 5G is still not working?

Power the Echo 5G off, then power it back on.

### Notes:

- The Echo does not lose any settings when GUI/Bluetooth connection has been dropped and subsequently restored.
- If the above listed solutions do not appear to resolve your concern, please <u>contact Pivotal</u> <u>Commware</u> for additional assistance.

## **Getting Technical Assistance**

Pivotal Commware is dedicated to the success of your Echo 5G installation and operation. Feel free to contact us with any questions or concerns.

Before calling, gather the following details about your Echo 5G:

- <u>Serial Number</u> (located on the bottom of the ODU, back of the IDU, and on the packaging box)
- Echo 5G settings

### **Pivotal Echo 5G Technical Support:**

- Phone 1-855-956-2016
- Email support@pivotalcommware.com
- File a Ticket https://pivotalcommware.freshdesk.com/support/home
- Pivotal Support Resources: https://pivotalcommware.com/echo-5g-installation-help/



10801 120th Ave NE, #200 Kirkland, WA 98033 USA



(425) 365-0408 pivotalcommware.com



# **Appendix D – Warranty Information**

Your Pivotal Commware, Inc. ("Pivotal") Echo 5G has been designed to provide reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section. For information regarding the terms and conditions of service for your Echo 5G, please visit <u>www.verizonwireless.com/support/</u> or call Verizon Wireless Customer Service at (800) 922-0204 or \*611 from your Verizon Wireless mobile phone.

# **Standard Limited Warranty**

### What is Covered and For How Long?

Pivotal warrants to the original purchaser ("Purchaser" or "You") that the Pivotal Echo 5G and accessories ("Products") included in this package are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date: All components carry a one-year warranty.

### What is Not Covered?

This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by Pivotal; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States.

### What are Pivotal's Obligations?

During the applicable warranty period, Pivotal will repair or replace, at Pivotal's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the seller's name and address. To obtain assistance on where to deliver the Product, call Verizon Customer Care at (800) 922-0204. Upon receipt, Pivotal will promptly repair or replace the defective Product. Pivotal may, at Pivotal's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of Pivotal. If Pivotal determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

### WHAT ARE THE LIMITS ON PIVOTAL'S WARRANTY/LIABILITY?

EXCEPT AS SET FORTH IN THE LIMITED WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND PIVOTAL MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;

WARRANTIES OF TITLE OR NON-INFRINGEMENT;

DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR

COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.



ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW. INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE LIMITED WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, PIVOTAL SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE LIMITED WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY PIVOTAL, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. PIVOTAL MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY PIVOTAL OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and Pivotal, and Pivotal's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of Pivotal are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on Pivotal. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by Pivotal and should not be relied upon.

# **User License Agreement for Software**

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Pivotal Commware, Inc. ("Pivotal") for software owned by Pivotal and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY INSTALLING, COPYING, DOWNLOADING, ACCESSING, OR OTHERWISE USING THE SOFTWARE AND/OR BY USING ANY MOBILE DEVICE ON WHICH THE SOFTWARE IS EMBEDDED (INCLUSIVE OF THE SOFTWARE, THE "PRODUCT"), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA.

1. GRANT OF LICENSE. Pivotal grants you the following rights provided that you comply with all terms and conditions of this EULA: You may use any Products purchased by you for your personal, non-commercial use. Your license to the Software embedded on such Products is non-exclusive, non-transferable (except as permitted under Section 6) and non-sublicensable.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Pivotal reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Pivotal or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative



works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Pivotal and its affiliates may collect and use technical information gathered as part of the product support services related to the Products provided to you, if any. Pivotal may use this information solely to improve its products and services, to provide benchmark reporting to its existing and prospective customers, and/or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Pivotal may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Pivotal as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the Product. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Product must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Product is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Product, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this EULA will terminate automatically without notice from Pivotal if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of any Products.

9. DISCLAIMER OF WARRANTIES. You expressly acknowledge and agree that use of the Products is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND PIVOTAL AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "PIVOTAL" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE PRODUCT, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. PIVOTAL DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE PRODUCT, THAT THE FUNCTIONS CONTAINED IN THE PRODUCT WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE PRODUCT WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE PRODUCT WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY PIVOTAL OR A PIVOTAL AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. EXCEPT AS EXPRESSLY PROVIDED IN PIVOTAL'S LIMITED WARRANTY, SHOULD THE PRODUCT PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL PIVOTAL BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE PRODUCT OR OTHERWISE ARISING OUT OF THE USE OF THE PRODUCT, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF PIVOTAL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.



11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Pivotal under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of (a) the actual damages you incur in reasonable reliance on the Product, up to the amount actually paid by you for the Product; or (b) US\$50.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of the State of Washington, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seattle, Washington, USA, in accordance with the Arbitration Rules of the Washington State Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Pivotal relating to the Product and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Product or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.



# **Appendix E – Glossary**

Term	Definition
3GPP LTE	LTE protocol per "3rd Generation Partnership Project," a mobile telephone standards org.
5G-NR	The 5G radio system
5G NSA	Non-Stand-Alone flavor of 3GPP 5G-NR requiring concurrent 4G capability to function (currently typical)
5G SA	Stand-Alone flavor of 3GPP 5G-NR able to work without 4G capability (eventually, future)
5G TF	Verizon 5G Task Force (aka pre-5G)
Activation	(Echo 5G) Installation and initial setup, which tunes the system to optimal functionality
ADC	Analog-Digital Converter (in electric circuitry)
Az, AZ, Azimuth	The "left-to-right" angle direction relative to nearby gNB location
BW	Bandwidth
CPE, Customer Premises Equip.	Typically: End-user obtained transceiver that distributes FWA broadband internet to devices within the home via WLAN (Wi-Fi). Effectively replaces cable/DSL internet
dB, decibel	A relative unit of power, used to express change in value as in "increase of 3 dB" presented on a logarithmic scale
dBm	A unit of level, indicating a power ratio expressed in decibels (dB) with reference to one milliwatt (mW)
DL, Downlink	Data/information transmitted in the direction from gNB to CPE/UE
КРІ	Key performance indicators: set of useful parameters that (in this case) CPE would report to Echo 5G, and Echo 5G would display it for user
EIRP	Equivalent Isotropic Radiated Power, a measure of Transmit power
El, EL, Elevation	The "up-to-down" angle direction relative to distant gNB location
EN-DC	E-UTRA NR dual connectivity (a flavor of NR NSA deployment)
EVM	Error Vector Magnitude, a measure of quality of received signal
FWA	Fixed Wireless Access.
Gigabit speed	A term of user-perceived throughput, as in Gigabits/second
gNodeB, gNB	5G NR base station
HBF	Pivotal Commware's Holographic Beam Forming technology that enables Gigabit speeds beyond the reach of cable and DSL
IDU	Indoor unit. The wireless power unit mounted on the interior side of the window.
Low-E glass	Low-Emissivity windowpanes, on which the coating that reflects sunlight also inhibits RF signals from passing into a building
LTE	Long-term Evolution, generally referring to technology path toward 4G speeds
LTE Cat M1	A flavor of IoT (internet of things) technology under 3GPP LTE umbrella



Term	Definition
Millimeter wave frequencies	Wavelength spectrum that correlates to ~24 GHz frequencies and higher
M&C	Monitoring and Controlling – or – Monitor and Control
OAM, OA&M	Operations, Administration & Management/Maintenance – the necessary processes for setting up and running a system
ODU	Outdoor unit. The unit mounted on the outdoor side of the window.
RF	Radio Frequency
SNR	Signal-to-Noise ratio
UE	User Equipment – typically CPE or a mobile device/smartphone
UL, Uplink	Data/information transmitted in the direction from CPE/UE towards gNB



# **Appendix F – Removal Instructions**

To remove your Echo 5G, take the following steps:

[1] Loosen the set screws and slide the ODU off the rails



[2] Slide the end of the removal tool under the rails, starting at the bottom and carefully lift the rails away from the window.



[3] Work your way up the rails from the bottom or side.



[4] When you have loosened the adhesive enough you can carefully remove the rails by hand.



[5] Use a window cleaner and the rough side of a sponge to clean any remaining adhesive off your window.

