




Quick *Disassembly* Guide

This guide provides guidance for proper de-cabling and disassembly of a mounted Pivot 5G 5620 unit.


IMPORTANT: Make sure all units have power to them turned off at the source.

1. Disconnect **ALL** cables before dismounting either unit.
2. The proper order for cable disconnection is as follows:
 1. **Power Cables**
 2. **Ethernet Cable(s)**
 3. **RF Cable(s)**
 4. **Ground Cables**


Donor Unit

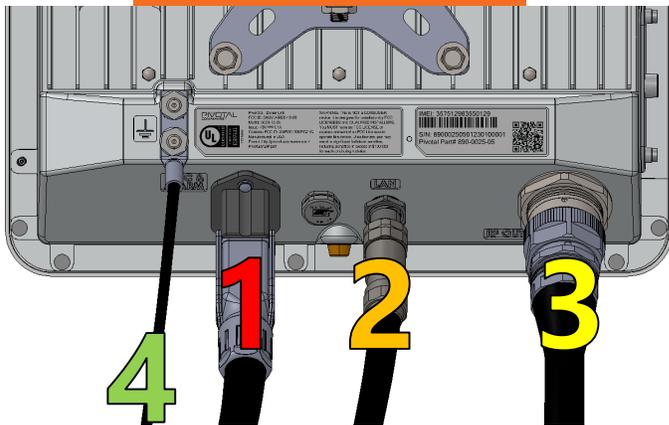

Service Unit(s)

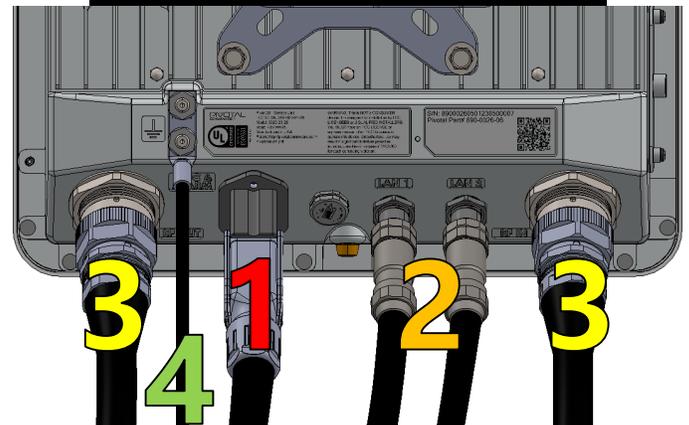

3. Unscrew the four bolts (3/8-inch hex head) mounting the unit to the bracket.

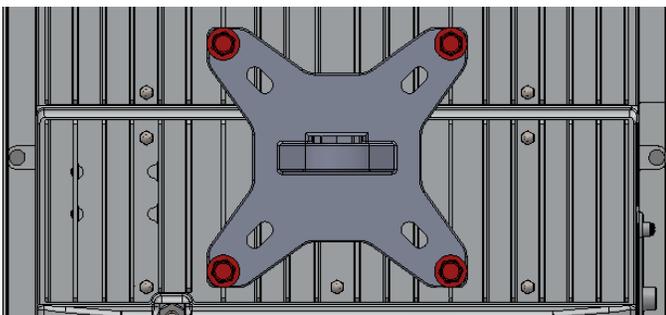

4. Remove the Band-It straps from the mounting bracket (if used) and unscrew the bracket from the pole or bracket backplate. Bracket to pole screws are a 7/16-inch hex head. Bracket to backplate screws are a 1/2-inch hex head.
5. Disassemble the bracket if desired.